
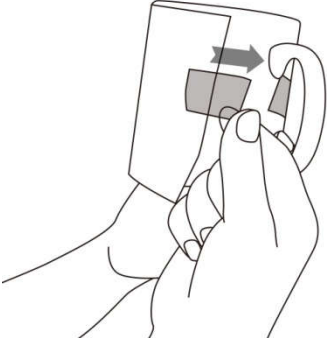
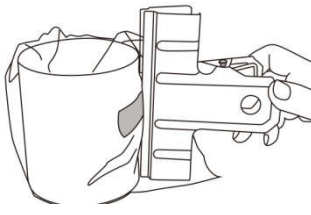
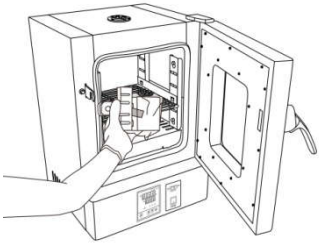
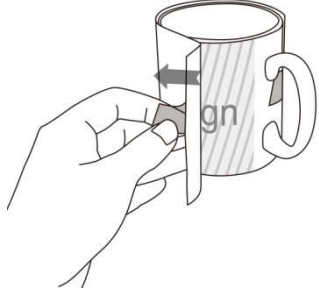



MUG HANDLE CLAMP USAGE GUIDELINE

The mug handle clamp is functioned as an extra force for the HSB(heat shrink bag) to shrink as close as possible to the mug handle during the sublimation imprint process, which not only makes the HSB printing with handle mugs possible, but also delivers great imprint quality and convenience.

This clamp is suitable for all current sizes and shapes of mugs that with a handle, please contact your local distributor or resellers if you find the clamp's size does not fit for the mug handle.

Please read through this guideline in order to gain the best imprint quality.

	<p>STEP 1. Print out the sublimation paper then cut them into proper shape with approximate 10mm blank bleeding edge for either left and right sides.</p>
 <p>STEP 2 Stick the cut paper on to the imprint substrate by thermal tapes.</p>	 <p>STEP 3 Place the imprint substrate into the HSB. Then use the clamp to hold tight on the handle of the substrate as shown in the picture.</p>
 <p>STEP 4 Put the substrate into the oven to start heat transfer.</p>	 <p>STEP 5 Remove the substrate from the oven when time's up, remove the clamp, peel of the HSB and the wrapped paper, wait for it to cool down.</p>
 <p>STEP 6 A printed substrate is done.</p>	